

Safety Alert 010

Produced with Kane International Ltd.



Title: Kane International Ltd., Potentially Faulty Charger - Product Batch Recall Notice

Date issued: 16 November 2012

Kane International Ltd., has become aware of a potential issue with a batch of its KMCU250/UK charger supplied with a number of its analyser kits. They have issued the following recall notice which draws attention to the problem and details the action to be taken.

Introduction

Kane International Ltd has become aware of a potential issue with the KMCU250/UK charger, which is supplied with the following analyser kits: KANE250, KANE425, KANE450 and KANE455. This only applies to a limited number of chargers within the specific batch number **WK 18-12**. Chargers from this batch were first shipped after 16th May 2012.

Defect

Chargers within this batch, when plugged into a 240V socket, have the potential to open up and separate when being unplugged.

Hazard

In some circumstances this could result in the exposure of live components with the potential for electric shock.


What To Do – Immediately

You should stop using this charger immediately! Switch off the electricity supply to the socket and completely remove the charger from the socket.

What To Do - Next

Check that the batch number which is located on the label – see accompanying product diagram.

Product Diagram

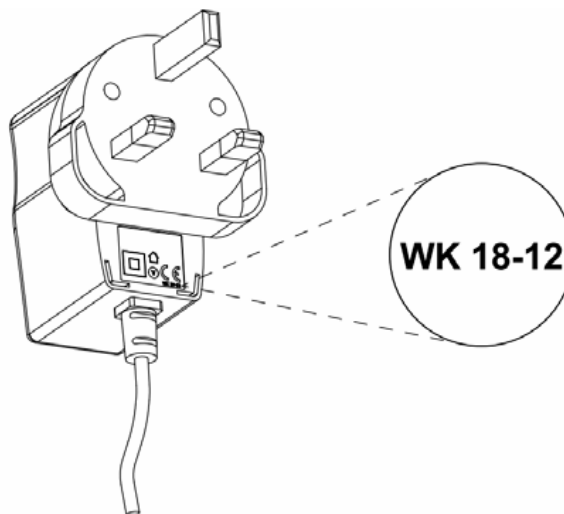

If the charger has the batch number **WK 18-12** then you should contact Kane International Ltd., who will replace it free of charge, by return.

The analyser can be continued to be operated using alkaline batteries.

Further information

Contact www.kane.co.uk or call 01707 384832 for further information regarding this recall.

-o0o-